


Installation dimensions Novomatic 423 & 563 S

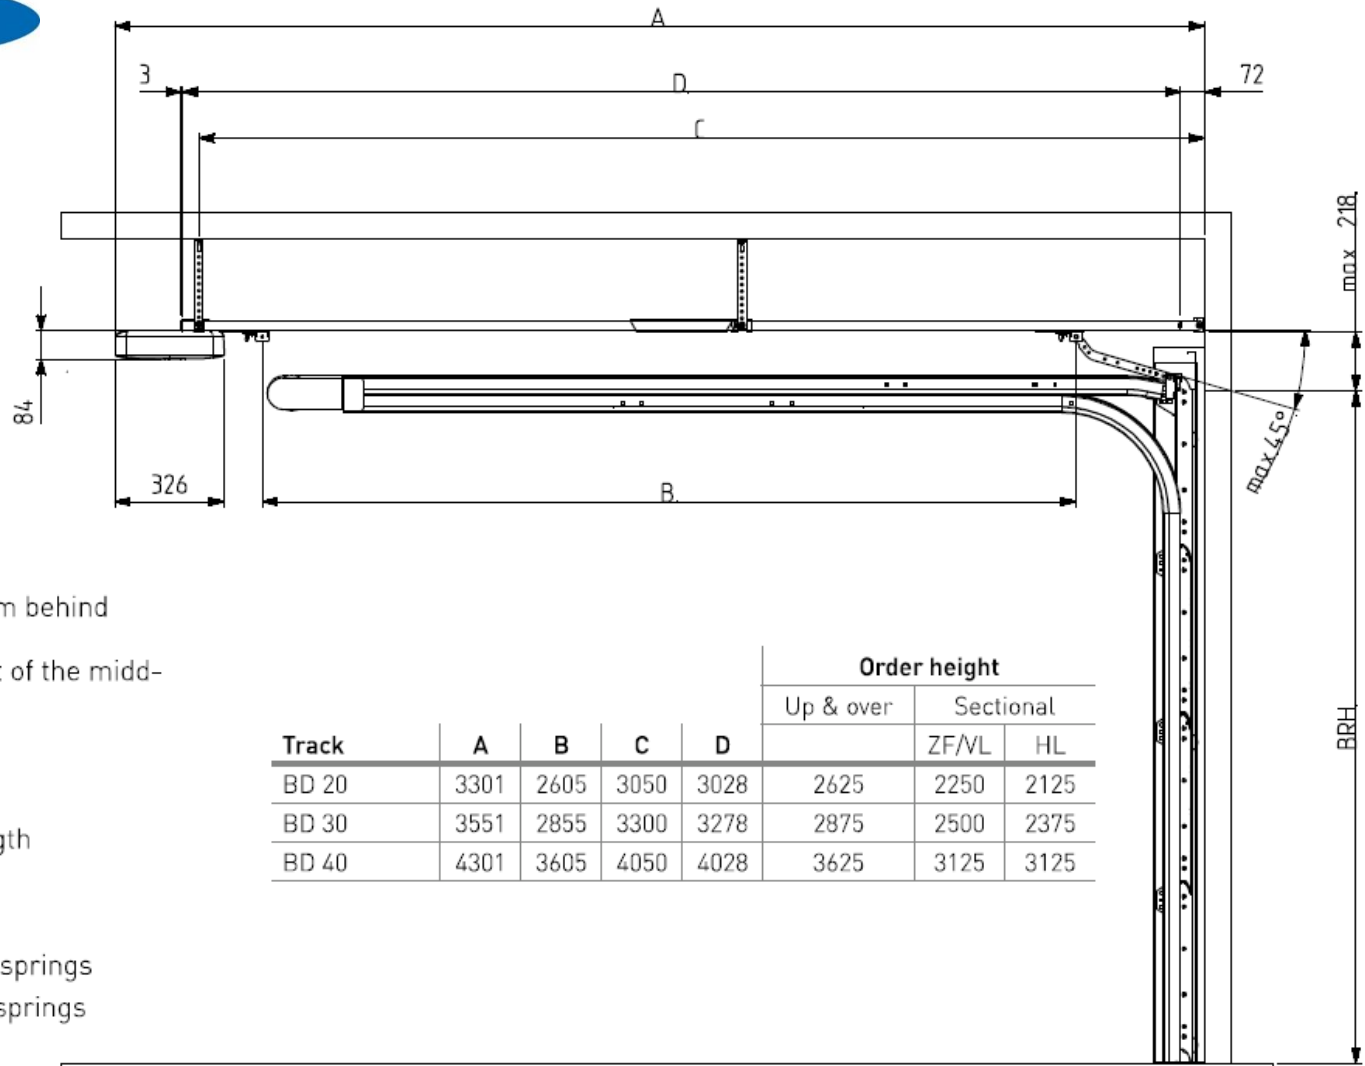

Note:

Mains socket approx. 150 mm behind operator dimension **A** and 300 mm right or left out of the middle of door-leaf centre.

Legend:

- A** Total lengths
- B** Max. track carriage length
- C** Fixing point operator
- H** Co-ordinating height
- VL** Front-mounted Torsion springs
- HL** Rear-mounted Torsion springs
- ZF** Extension springs

Track	A	B	C	D	Order height		
					Up & over	Sectional	
					ZF/VL	HL	
BD 20	3301	2605	3050	3028	2625	2250	2125
BD 30	3551	2855	3300	3278	2875	2500	2375
BD 40	4301	3605	4050	4028	3625	3125	3125